



 
## Please read the manual carefully before using this product

- 1. Digital display
- 2. On/off button
- 3. Mode switch button
- 4. SUM button
- 5. Load-bearing area
- 6. Charging Indicator
- 7. Reset switch
- 8. TYPE-C charging port, Charging cable included

Power ON/OFF Press O to switch on and hold O for 3 seconds to switch off

## Mode switch:

- 1. Press on/off button to start
- 2. Hold the SUM button, then press the Mode Switch button to switch modes
- 3. There are three modes to choose from, illustrated below



Motorhome / Vehicle

Dual Axle Caravan / Trailer

Single Axle Caravan / Trailer

#### **Recommended Usage:**

- Position the product approximately 40-50cm away from the tires.
- Start the vehicle, release the brake completely, and avoid pressing the accelerator.
- Drive at a steady pace through the designated area.
- It is recommnded to use reverse gear if possible.

#### Reset switch:

If the display area of the product fails or the power switch function fails, insert the reset-tool into the reset switch hole (07) and press the reset switch, the product will return to the factory state.

#### Specifications:

Size: 350 x 60 x 30mm

Weight: 1,28 kg

Battery Specification: 3,7 \l, 600mAh Lithium polymer battery

Input voltage/current: 5V I 0,6A

Battery capacity: 15 hours (approximately 60 rounds of use)

Waterproof grade: IP44

## Warning:

- 1. Don't measure the weight of product over 1500 KG.
- 2. The control panel must not be compressed by heavy objects.
- 3. The product should not be immersed in water or be used/stored
- for long periods of time in a humid environment.
- 4. When measuring the weight of the object, the accuracy tolerance is 2.5%.
- 5. Please make sure to use this product on a hard and even surface, and avoid slippery roads.









#### 1-Year Limited Warranty

This product is covered by a 1-year warranty against defects in materials and workmanship under normal use. This warranty does not cover damage caused by misuse, incorrect installation, or normal wear and tear.

If a defect arises, we will repair or replace the product (or its defective part) at our discretion. Proof of purchase is required for all claims. Costs for inspection, delivery, or unapproved third-party work are not covered.

For full warranty terms and condition visit:

https://www.coastrv.com.au/warranty-policy

## **Australian Consumer Law Notice**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if they fail to be of acceptable quality and the failure does not amount to a major failure.

Supplier: Coast RV Pty Ltd

Contact: warranty@coasrtrv.com.au







# **INSTRUCTION MANUAL** 1500KG WHEEL WEIGHT SCALE

Please read the manual carefully before using this product

## **Definition of symbols:**

## **Program 1 Program 2 Program 3** Motorhome and vehicle Caravan twin axle Caravan single axle and trailer and trailer 1 Weight right front wheel Weight jockey wheel Weight jockey wheel 2 2 Weight right back wheel Weight right wheel Weight right wheel 3 3 3 Weight left wheel Weight left wheel Weight left front wheel Weight left back wheel Total weight Total weight Program Display 5 Total weight of left side of vehicle 6 Weight Reading Battery Status Total weight of right side of vehicle You have driven too fast over this Weight Control. Reweigh this wheel Total weight of the vehicle Symbol is blinking Symbol is lighting up





